


# TRANSMITTER BATTERY

## COMPONENTS

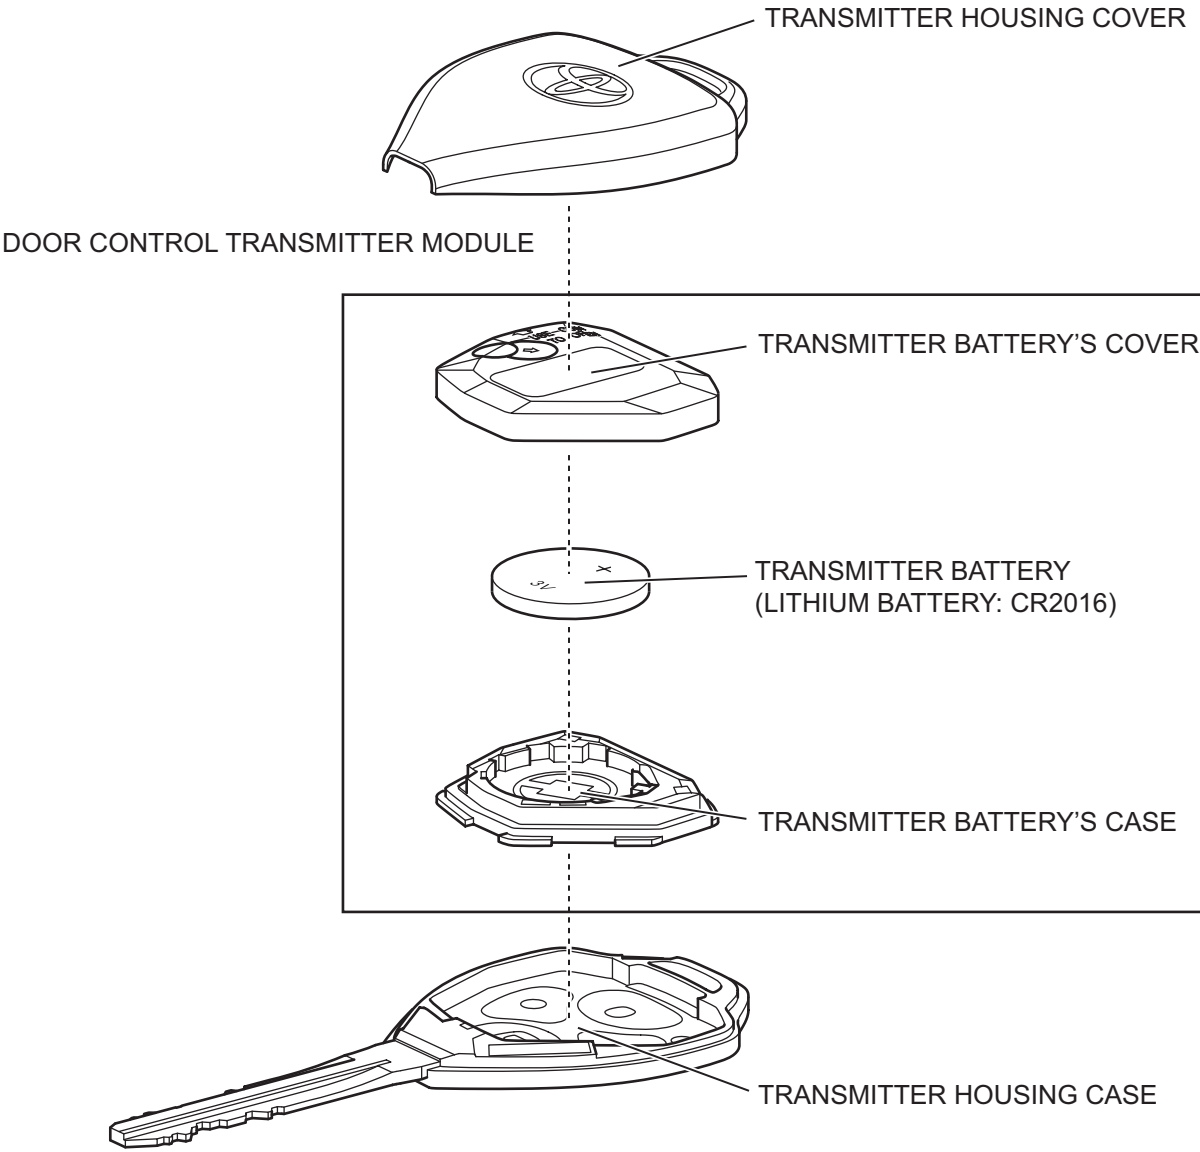

DL

## REMOVAL

### 1. REMOVE TRANSMITTER HOUSING COVER

**NOTICE:**

Take extra care when handling these precision electronic components.


- (a) Twist the screwdriver in the direction of the arrow mark in the illustration, and open the transmitter housing cover.

**NOTICE:**


Do not forcibly pry the cover.

**HINT:**

Tape the screwdriver tip before use.

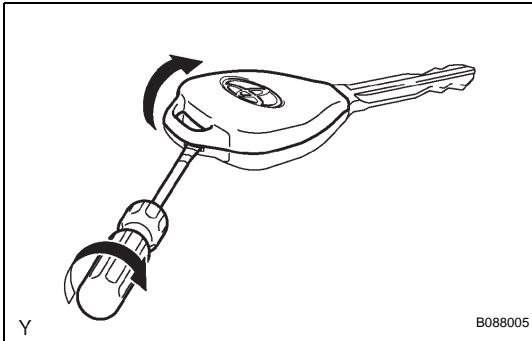


### 2. REMOVE DOOR CONTROL TRANSMITTER MODULE

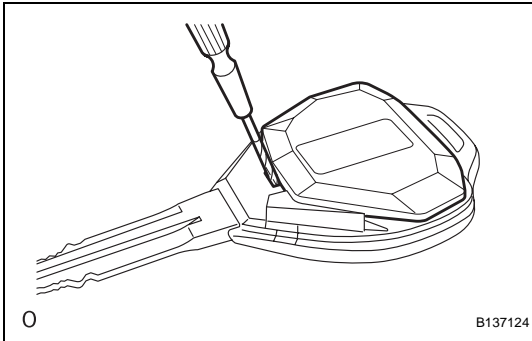

### 3. REMOVE TRANSMITTER BATTERY


- (a) Twist the coin in the direction of the arrow mark in illustration, and remove the transmitter battery's cover.

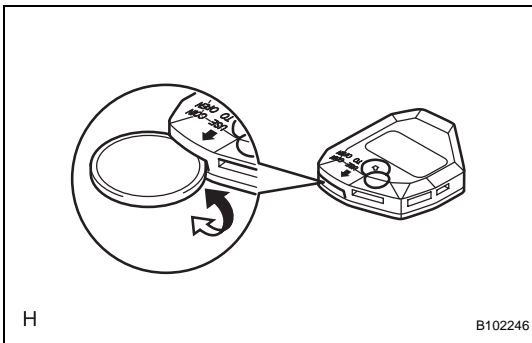

- (b) Remove the battery (lithium battery: CR2016).

**NOTICE:**

- Do not push the terminals with your finger.
- Do not forcibly pry up the battery. The terminals may become damaged.
- Do not touch the battery with wet hands. Water may cause rust.
- Do not touch or move any components inside the transmitter. It may cease to work.

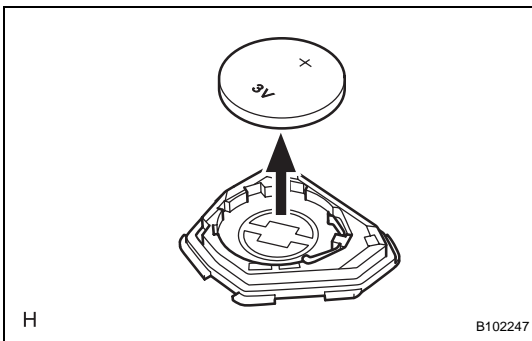

## INSTALLATION

### 1. INSTALL TRANSMITTER BATTERY



**NOTICE:**

Take extra care when handling these precision electronic components.


- (a) Install a battery (lithium battery: CR2016) with the positive (+) side facing upward, as shown in the illustration.

**NOTICE:**

- Be careful not to bend the transmitter battery electrode during insertion.
- Keep the transmitter cover interior free of dust and oil.

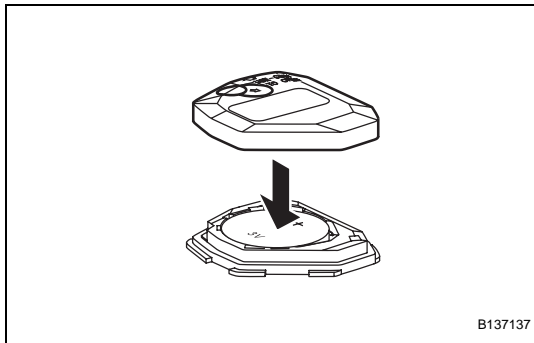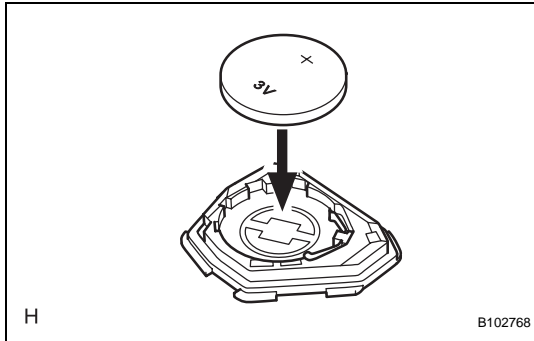

- (b) Install the cover.

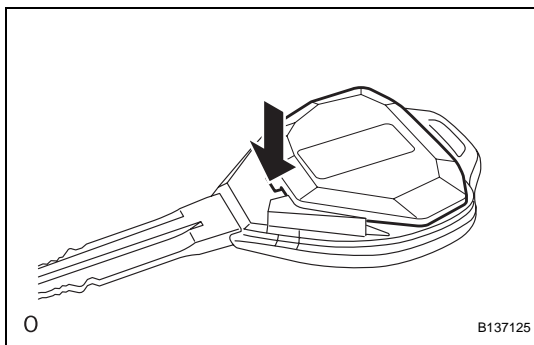

### 2. INSTALL DOOR CONTROL TRANSMITTER MODULE

### 3. INSTALL TRANSMITTER HOUSING COVER

- (a) Install the transmitter housing cover to the transmitter housing case.
- (b) Check that the transmitter's LED illuminates 3 times when the switch is pressed 3 times.

**OK:**

Transmitter's LED illuminates 3 times when switch is pressed 3 times.

